




Flying:  
 Add ballast to nose to set pitch trim. Leave stab. incidence as shown. CG goes fwd of wing LE. Wind motors carefully. Breaking a motor will probably damage wing or stab. Good Flying ...

# Almost Wright 1903

by Dick Baxter  
 Jan 2003

all 1/16 square except...  
 motor stick 1/16 x 3/16  
 and...  
 struts 1/16 x 3/32

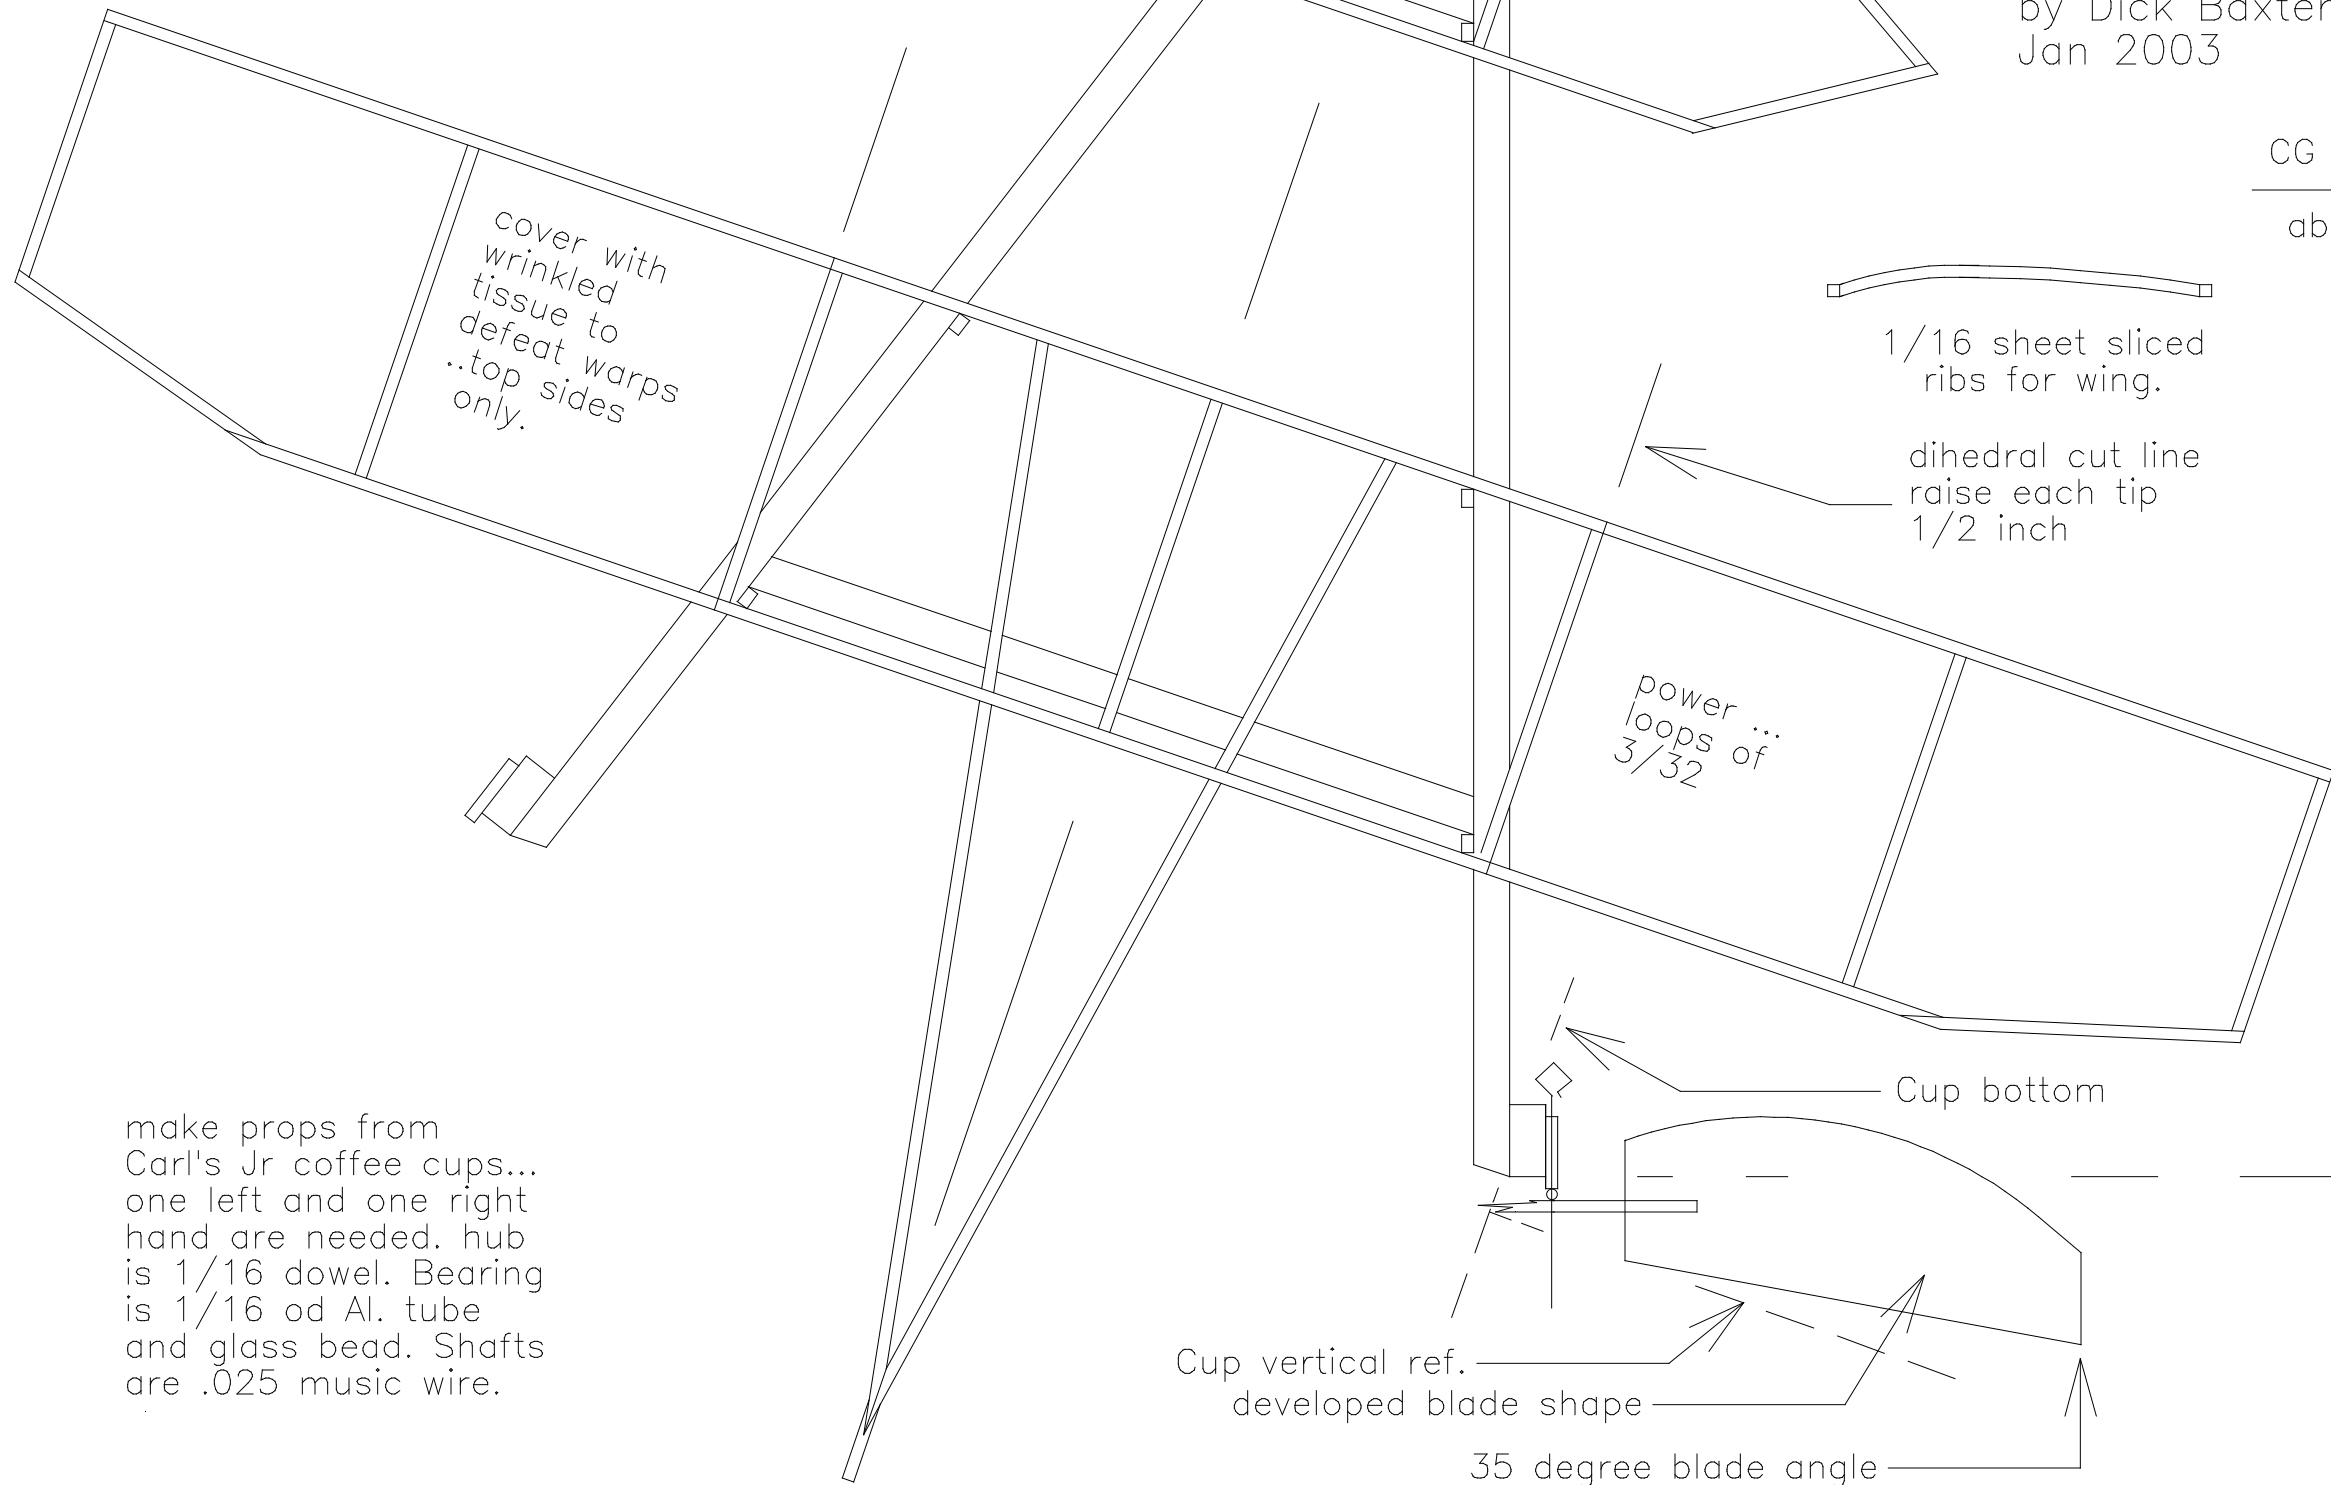

CG goes about here



note cross brace

note thrust offset...

SIDE VIEW looking normal to left motor stick.. but fin is true

make props from Carl's Jr coffee cups... one left and one right hand are needed. hub is 1/16 dowel. Bearing is 1/16 od Al. tube and glass bead. Shafts are .025 music wire.